No. 1724 3-11-28

Hobbies FRETWORK DESIGN

The ⟶ indicates direction of grain of wood.

LOUD SPEAKER

www.finescrollsaw.com

PEDIMENT

TOP. Cut one ¼ in. thick. Dotted lines indicate positions of sides, front and pediment.

POSITION OF FRONT

SIDE

Specially suitable for the "Electron" Cone Loud Speaker, with metal frame and unit complete. For proper method of fixing the speaker see "Hobbies" of above date.

For Prices of Wood and Fittings see current Catalogue, or on application.

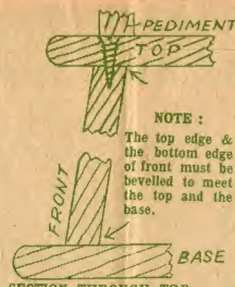

SECTION THROUGH TOP & BASE OF SPEAKER.

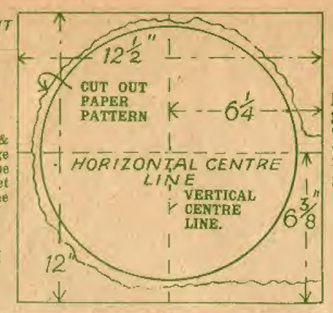

DIAGRAM SHOWING HOW THE PATTERN FOR THE FRONT IS PASTED TO THE WOOD.

SCREW

SCREW

No. 53 ⅜ in. HALF-ROUND BEADING, TWO PIECES 12 in. LONG REQUIRED.

NOTE.—The Hobbies Presentation Designs are not given away with back numbers of Hobbies. Additional copies may be had from Hobbies Limited.

PEDIMENT Cut one ¼ in. thick and screw to top.

Note—The Pediment is cut from waste wood from back of Base.

No. 53 BEADING

SIDE

6⅜" TO BOTTOM EDGE OF BOARD.

SHAPE THIS EDGE

SCREW

SIDE

POSITION OF FEET

SCREW

No. 53 BEADING

POSITION OF FEET

FRONT

SHAPE THIS EDGE

SCREW

THE BASE (Half only shown) Cut from ¾ in. wood.

FIXING BLOCK SCREWED TO BASE

CENTRE LINE

HORIZONTAL CENTRE LINE

FIXING BLOCKS

AT SIDES

FEET

Cut from waste wood from centre of panel as shown.

FEET

VERTICAL CENTRE LINE

FEET

FEET

FIXING BLOCK AT BASE

— SIZE —
BASE 13¾ by 6½ in.
OVERALL HEIGHT 14 in.

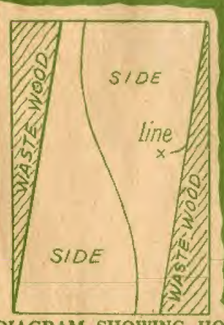

DIAGRAM SHOWING HOW THE PATTERN FOR THE TWO SIDES IS OBTAINED.

ADDRESSES.

All orders by post should be addressed :—
HOBBIES LIMITED, Dereham, Norfolk.
Customers residing in the neighbourhood may obtain Tools, Wood and Fittings by calling at the HOBBIES Supply Stores :
LONDON : 65 New Oxford Street, W.C.
" 147 Bishopsgate, E.C.
" 79 Walworth Road, S.E.
GLASGOW : 326 Argyle Street.
MANCHESTER : 10a Piccadilly.
BIRMINGHAM : 9a High Street.
LEEDS : 10 Queen Victoria Street, Briggate.
SOUTHAMPTON : 25 Bernard Street.
BRIGHTON : 68 London Road.
SHEFFIELD : 214 West Street.
TORONTO : 385½ Yonge Street.
And of all HOBBIES Authorised Agents.

SIDES. Cut two ½ in. thick. Stick the pattern for the one side to the wood, in the manner shown in the diagram, and cut out with the fretsaw in the usual way. The second side is obtained by drawing the line X, using the cut-out side as a template for drawing round.

NOTE :—The metal frame of the speaker may be fixed in position by inserting pieces of stout felt or rubber between the fixing blocks which are screwed to the sides and base. The top of the metal frame may also be wedged with felt or rubber as desired.

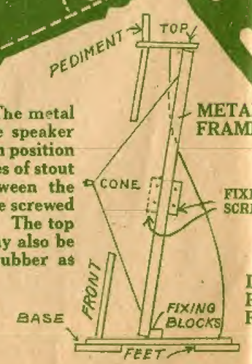

DIAGRAM SHOWING POSITION & METHOD OF FIXING THE CONE LOUD SPEAKER UNIT.

PRINTED IN ENGLAND.

FRONT. For this a piece of wood 12 in. long, 12½ in. wide and ¼ in. thick is required. Measure up 6⅜ in. from bottom edge of board, this determines horizontal centre. Divide width of board into two, and set up vertical centre, now paste down the pattern to these centre lines. (See diagram at top of sheet).